

Reusable Fittings





Reusable fittings reduce downtime on equipment when hose line replacement is needed. Reusable fittings allow you to quickly and conveniently produce a hose assembly using only hand tools.

Terminations:

BSP - JIC - NPT - METRIC

 
Ranges from 1/4" to 1"

Part No.	Hose Bore		Box Qty.
	Ins.	mm	

R100

REUSABLE FERRULES R1A

FLEXEQIP




R100 04		1/4"	6	
R100 05		5/16"	8	
R100 06		3/8"	10	
R100 08		1/2"	13	
R100 10		5/8"	16	
R100 12		3/4"	19	
R100 16		1"	25	

R200

REUSABLE FERRULES R2A

 FLEXEQIP




R200 04		1/4"	6	
R200 05		5/16"	8	
R200 06		3/8"	10	
R200 08		1/2"	13	
R200 10		5/8"	16	
R200 12		3/4"	19	
R200 16		1"	25	

R710

REUSABLE FERRULES R1T

 FLEXEQIP




R710 04		1/4"	6	
R710 05		5/16"	8	
R710 06		3/8"	10	
R710 08		1/2"	13	
R710 10		5/8"	16	
R710 12		3/4"	19	
R710 16		1"	25	

R720

REUSABLE FERRULES R2T

 FLEXEQIP




R720 04		1/4"	6	
R720 06		3/8"	10	
R720 08		1/2"	13	
R720 10		5/8"	16	
R720 12		3/4"	19	
R720 16		1"	25	

Part No.	Nut Type	Thread	Hose Bore		Box Qty.
			Ins.	mm	

RB04

 REUSABLE INSERTS - BSP FEMALE 60° SEAT




FLEXEQIP

RB04 02 04	a	1/8"	1/4"	6		
RB04 04 04	a	1/4"	1/4"	6		
RB04 04 06	a	1/4"	3/8"	10		
RB04 06 06	a	3/8"	3/8"	10		
RB04 06 08	a	3/8"	1/2"	13		
RB04 08 06	a	1/2"	3/8"	10		
RB04 08 08	a	1/2"	1/2"	13		
RB04 12 12	a	3/4"	3/4"	19		
RB04 16 16	a	1"	1"	25		

RB23

 REUSABLE INSERTS - BSP 90° SWEPT ELBOW

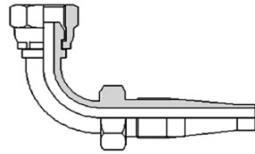


FLEXEQIP

RB23 04 04	a	1/4"	1/4"	6		
RB23 06 04	a	3/8"	1/4"	6		
RB23 06 06	a	3/8"	3/8"	10		
RB23 08 08	a	1/2"	1/2"	13		
RB23 10 10	a	5/8"	5/8"	16		
RB23 12 12	a	3/4"	3/4"	19		
RB23 16 16	a	1"	1"	25		

RB25

 REUSABLE INSERTS - BSP 45° SWEPT ELBOW




FLEXEQIP

RB25 04 04	a	1/4"	1/4"	6		
RB25 06 04	a	3/8"	1/4"	6		
RB25 06 06	a	3/8"	3/8"	10		
RB25 08 08	a	1/2"	1/2"	13		
RB25 10 10	a	5/8"	5/8"	16		
RB25 12 12	a	3/4"	3/4"	19		
RB25 16 16	a	1"	1"	25		

RB60

 REUSABLE INSERTS - BSP MALE PARALLEL 60° SEAT




FLEXEQIP

RB60 04 04		1/4"	1/4"	6		
RB60 06 06		3/8"	3/8"	6		
RB60 08 06		1/2"	3/8"	10		
RB60 08 08		1/2"	1/2"	13		
RB60 10 10		5/8"	5/8"	16		
RB60 12 12		3/4"	3/4"	19		
RB60 16 16		1"	1"	25		

RB17F

 REUSABLE INSERTS - BSP 90° COMPACT ELBOW

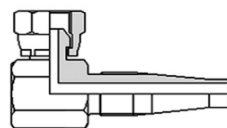



FLEXEQIP

RB17F 04 04	a	1/4"	1/4"	6		
RB17F 06 06	a	3/8"	3/8"	10		
RB17F 08 08	a	1/2"	1/2"	13		
RB17F 10 10	a	5/8"	5/8"	16		
RB17F 12 12	a	3/4"	3/4"	19		
RB17F 16 16	a	1"	1"	25		

Part No.	Nut Type	Thread	Hose Bore		Box Qty.
			Ins.	mm	

RJ04

  REUSABLE INSERTS - JIC FEMALE

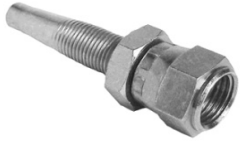


FLEXEQIP

RJ04 07 04	a	7/16"	1/4"	6	
RJ04 08 04	a	1/2"	1/4"	6	
RJ04 09 04	a	9/16"	1/4"	6	
RJ04 09 06	a	9/16"	3/8"	10	
RJ04 12 06	a	3/4"	3/8"	10	
RJ04 12 08	a	3/4"	1/2"	13	
RJ04 14 08	a	7/8"	1/2"	13	
RJ04 14 10	a	7/8"	5/8"	16	
RJ04 17 10	a	1.1/16"	5/8"	16	
RJ04 17 12	a	1.1/16"	3/4"	19	
RJ04 19 12	a	1.3/16"	3/4"	19	

RJ23

 REUSABLE INSERTS - JIC 90° SWEPT ELBOW

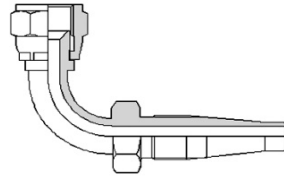


FLEXEQIP

RJ23 07 04	a	7/16"	1/4"	6	
RJ23 08 04	a	1/2"	1/4"	6	
RJ23 09 04	a	9/16"	1/4"	6	
RJ23 09 06	a	9/16"	3/8"	10	
RJ23 12 06	a	3/4"	3/8"	10	
RJ23 12 08	a	3/4"	1/2"	13	
RJ23 14 08	a	7/8"	1/2"	13	
RJ23 14 10	a	7/8"	5/8"	16	
RJ23 17 10	a	1.1/16"	5/8"	16	
RJ23 17 12	a	1.1/16"	3/4"	19	
RJ23 19 12	a	1.3/16"	3/4"	19	

RJ25

 REUSABLE INSERTS - JIC 45° SWEPT ELBOW

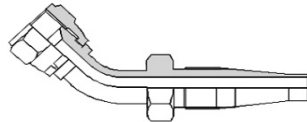


FLEXEQIP

RJ25 07 04	a	7/16"	1/4"	6	
RJ25 08 04	a	1/2"	1/4"	6	
RJ25 09 04	a	9/16"	1/4"	6	
RJ25 09 06	a	9/16"	3/8"	10	
RJ25 12 06	a	3/4"	3/8"	10	
RJ25 12 08	a	3/4"	1/2"	13	
RJ25 14 08	a	7/8"	1/2"	13	
RJ25 14 10	a	7/8"	5/8"	16	
RJ25 17 10	a	1.1/16"	5/8"	16	
RJ25 17 12	a	1.1/16"	3/4"	19	
RJ25 19 12	a	1.3/16"	3/4"	19	

RJ60

 REUSABLE INSERTS - JIC MALE




FLEXEQIP

RJ60 07 04		7/16"	1/4"	6	
RJ60 09 04		9/16"	1/4"	6	
RJ60 09 06		9/16"	3/8"	10	
RJ60 12 06		3/4"	3/8"	10	
RJ60 12 08		3/4"	1/2"	13	
RJ60 14 08		7/8"	1/2"	13	
RJ60 14 10		7/8"	5/8"	16	
RJ60 17 10		1.1/16"	5/8"	16	
RJ60 17 12		1.1/16"	3/4"	19	

RN60

 REUSABLE INSERTS - NPTF MALE



FLEXEQIP

RN60 04 04		1/4"	1/4"	6	
RN60 06 06		3/8"	3/8"	10	
RN60 08 06		1/2"	3/8"	10	
RN60 08 08		1/2"	1/2"	13	
RN60 12 10		3/4"	5/8"	16	
RN60 12 12		3/4"	3/4"	19	
RN60 16 16		1"	1"	25	


Part No.	Nut Type	Thread	Hose Bore		Box Qty.
			Ins.	mm	

RML4

REUSABLE INSERTS - METRIC FEMALE DKL



 FLEXEQIP




RML4 16 05	a	16	5/16"	8	
RML4 16 06	a	16	3/8"	10	
RML4 18 06	a	18	3/8"	10	
RML4 22 08	a	22	1/2"	13	
RML4 30 12	a	30	3/4"	19	

RM63

REUSABLE METRIC MALE CEL



 FLEXEQIP



RM63 12 04		12 x 1.5	1/4"	6	
RM63 14 04		14 x 1.5	1/4"	6	
RM63 22 06		22 x 1.5	3/8"	10	
RM63 22 08		22 x 1.5	1/2"	13	


Part No.	Pipe Dia. mm	Hose Bore		Box Qty.
		Ins.	mm	

RM53

REUSABLE STANDPIPE



 FLEXEQIP




RM53 08 04		8.0	1/4"	6	
RM53 10 04		10.0	1/4"	6	
RM53 12 05		12.0	5/16"	8	
RM53 12 06		12.0	3/8"	10	
RM53 15 08		15.0	1/2"	13	
RM53 18 10		18.0	5/8"	16	
RM53 22 12		22.0	3/4"	19	
RM53 26 16		26.0	1"	25	
RM53 28 16		28.0	1"	25	

RM54

REUSABLE STANDPIPE - 90° SWEPT ELBOW



 FLEXEQIP

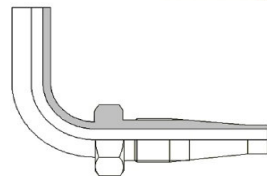


RM54 08 04		8.0	1/4"	6	
RM54 10 05		10.0	5/16"	8	
RM54 12 05		12.0	5/16"	8	
RM54 10 06		10.0	3/8"	10	
RM54 14 06		14.0	3/8"	10	

RM56

REUSABLE STANDPIPE - 45° SWEPT ELBOW



 FLEXEQIP

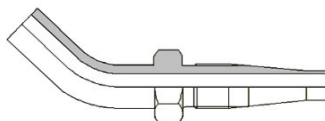

RM56 06 04		6.0	1/4"	6	
RM56 08 04		8.0	1/4"	6	
RM56 10 04		10.0	1/4"	6	
RM56 10 05		10.0	5/16"	8	
RM56 14 06		14.0	3/8"	10	
RM56 16 08		16.0	1/2"	13	